



FLORENCE COLLECTION

COAT HOOK 3" 322139

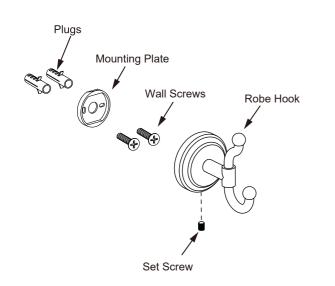

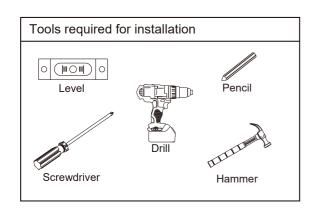


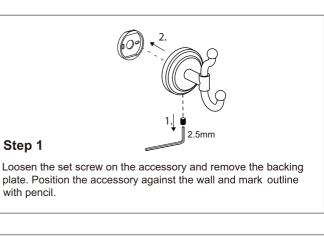

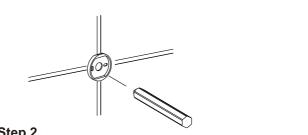

Step 2

Position the backing plate flat side down on the wall and mark holes with pencil.

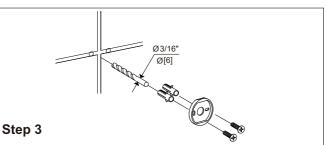

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall. Position backing plate flat side down over the plugs and install screws.

