

Model : 034723-F08
034723-H01

Sink : 200555
218023

Countertop : 307023
367023


Contempo Collection

For installing under counter sink and top

Step 1 : Apply adhesive caulking around the topside of rim near the edge, Carefully raise sink in place, align, and press firmly

See Figure 1.


Figure 1.

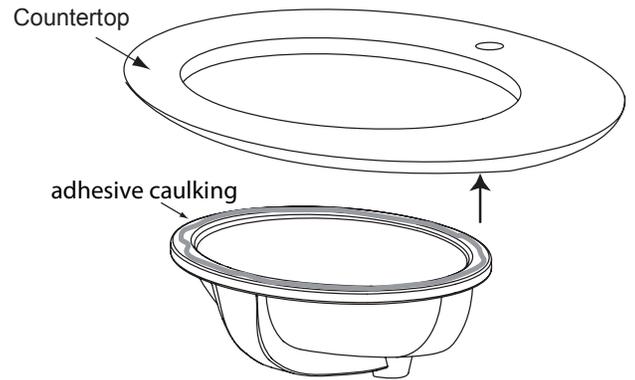

Step 2 : Attach 4 undermount-clips to hold lavatory in place

See Figure 2.


Figure 2.

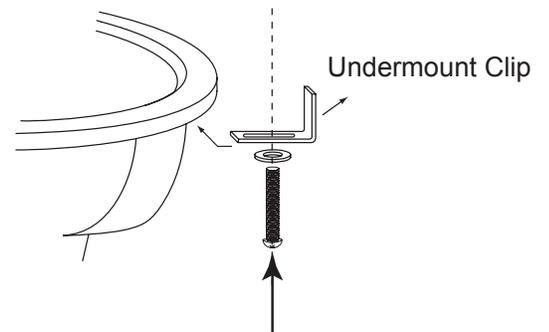

Step 3 : Secure top & back splash to cabinet by using adhesive caulk

See Figure 3.

Figure 3.

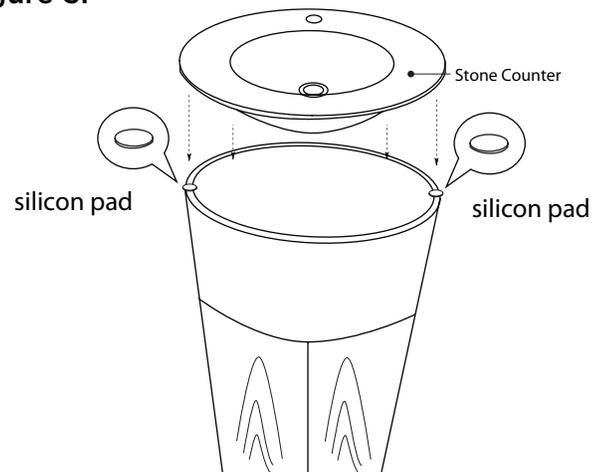

to be continue on next page

Model : 034723-F08 **Sink :** 200555 **Countertop :** 307023
034723-H01 218023 367023


Contempo Collection

Step 4 : Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop

(there maybe a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead)

See Figure 4.


Figure 4.

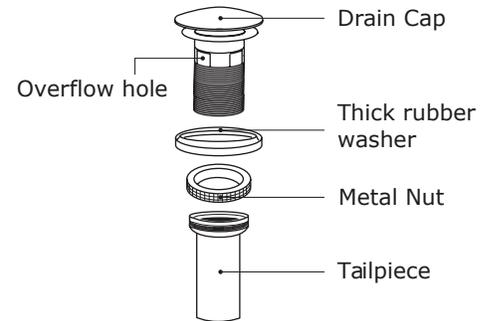

Step 5 : From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty.

See Figure 5.

Figure 5.

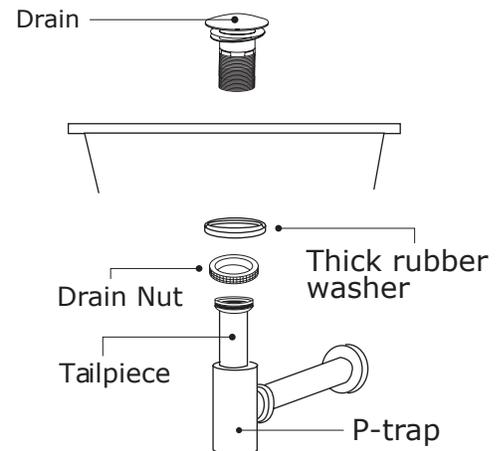

Step 6 : Attach p-trap to tailpiece.


to be continue on next page

Model: 034723-F08
034723-H01

Contempo Collection

Step 1 : Unpack glass shelf from styrofoam packaging
See Figure 1.


Figure 1

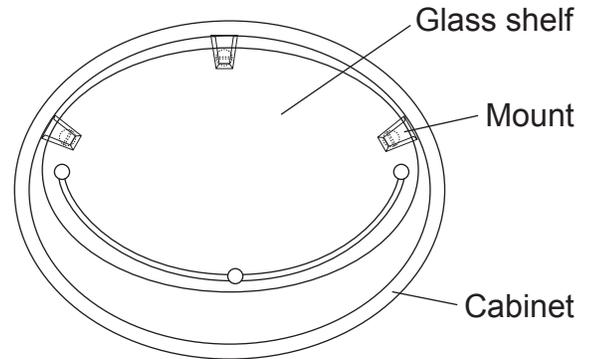

Step 2 : Unscrew flat head setscrews in glass shelf mounts (3) located inside cabinet

Step 3 : Turn Phillips head mount post screw clockwise 90° or til tight
See Figure 2.

Figure 2

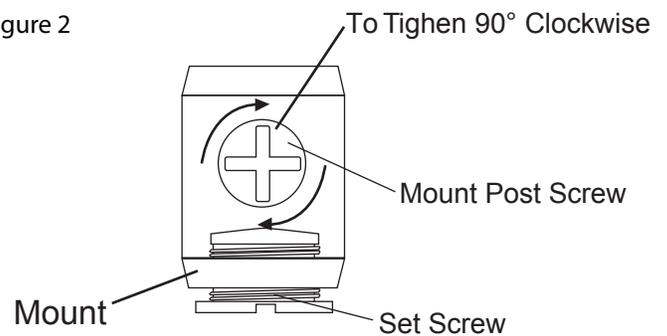

Step 4 : Insert glass shelf into mounts
See Figure 3.

Step 5 : Clamp glass shelf into mounts by tightening setscrews
Be careful not to overtighten.

Figure 3

