

MODEL: 213325
213331
213337


INSTALLATION SHEET

UTILITY SINKS AS SINKTOPS

STEP 1: Position countertop opening to ensure clearance between the lavatory, faucet and backsplash. Cut 20"w x 15 1/2"l (max) opening in countertop. Position and set sink and seal with silicone adhesives or caulking

See Figure 1.

Figure 1.

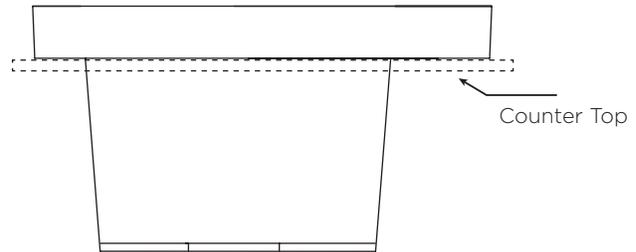


STEP 2: Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

NOTE: Uses cUPC approved 3-1/2" kitchen sink drain (not included)

See Figure 2.


Figure 2.

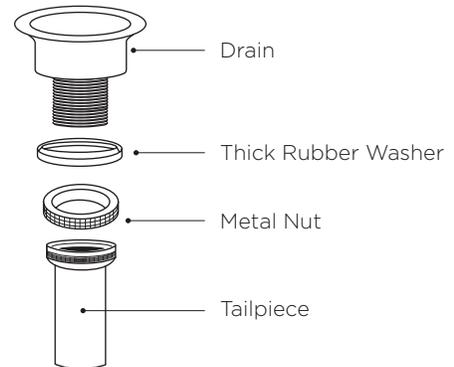

STEP 3: From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty

See Figure 3.

Figure 3.

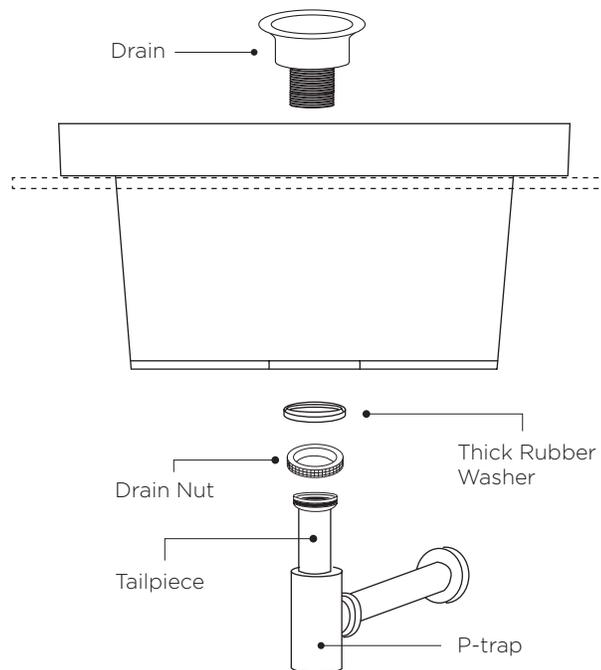

STEP 4: Attach p-trap to tailpiece.

MODEL: 213325
213331
213337


INSTALLATION SHEET

UTILITY SINKS AS SINKTOPS

STEP 1: Position countertop opening to ensure clearance between the lavatory, faucet and backsplash. Cut 24 1/4" w x 15 1/2" l (max) opening in countertop. Position and set sink and seal with silicone adhesives or caulking

See Figure 1.

Figure 1.

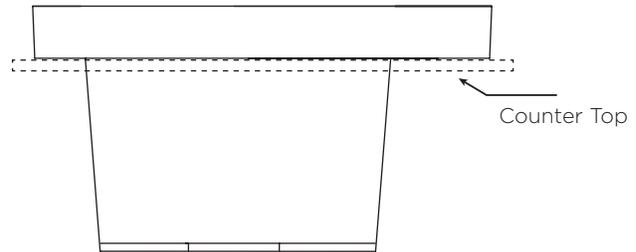


STEP 2: Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

NOTE: Uses cUPC approved 3-1/2" kitchen sink drain (not included)

See Figure 2.


Figure 2.

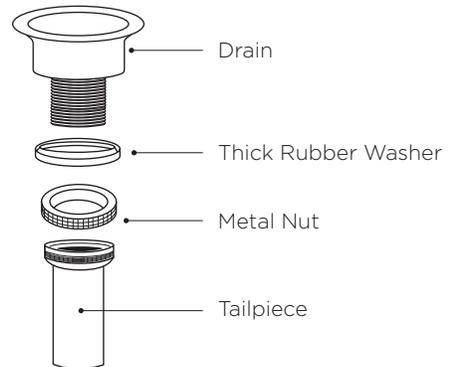

STEP 3: From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty

See Figure 3.

Figure 3.

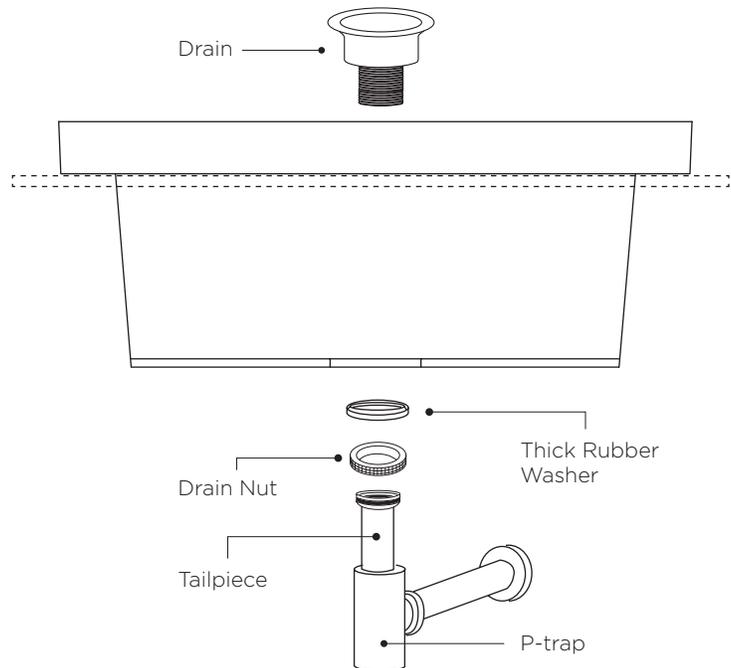

STEP 4: Attach p-trap to tailpiece.

MODEL: 213325
213331
213337

INSTALLATION SHEET

UTILITY SINKS AS SINKTOPS

Figure 1.

STEP 1: Position countertop opening to ensure clearance between the lavatory, faucet and backsplash. Cut 30 1/4" w x 15 1/2" l (max) opening in countertop. Position and set sink and seal with silicone adhesives or caulking

See Figure 1.

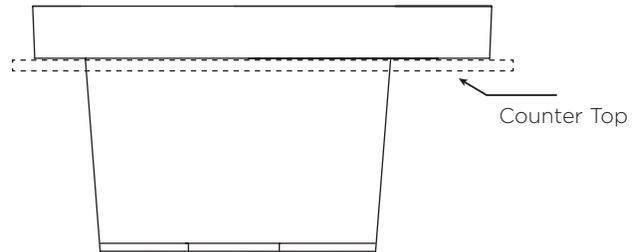


Figure 2.

STEP 2: Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

NOTE: Uses cUPC approved 3-1/2" kitchen sink drain (not included)

See Figure 2.


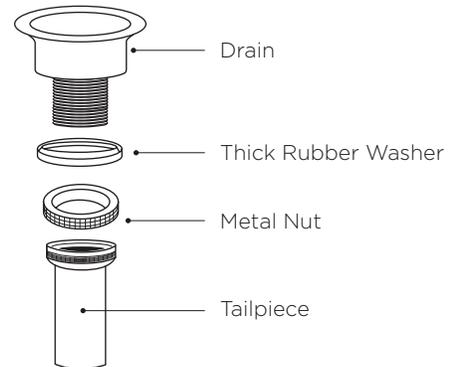


Figure 3.

STEP 3: From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty

See Figure 3.

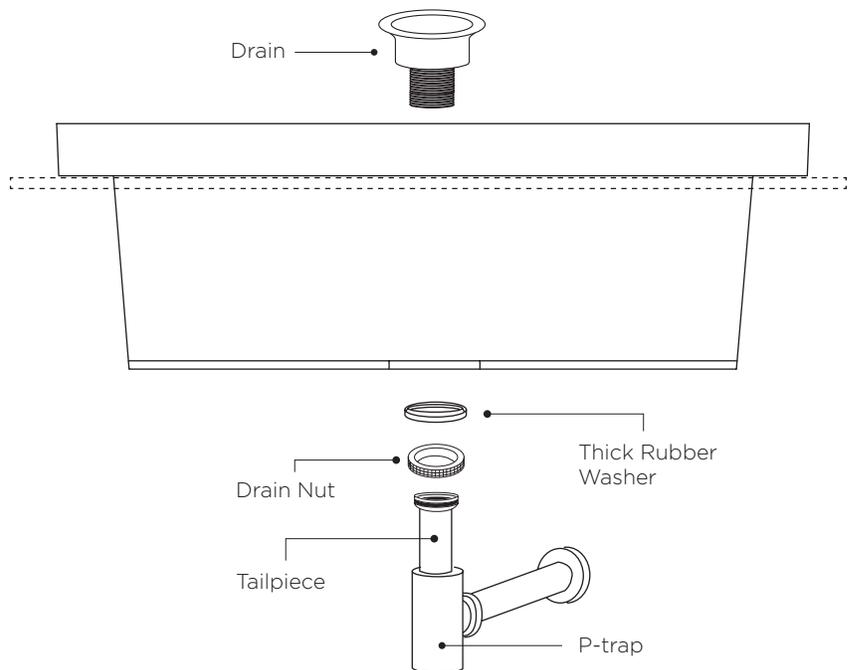

STEP 4: Attach p-trap to tailpiece.