

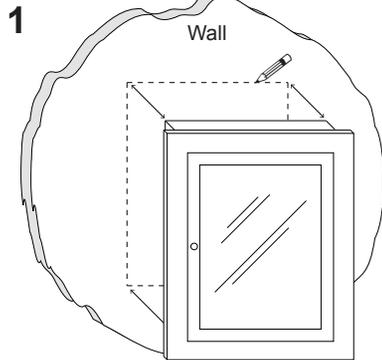


Medicine Cabinet Installation: Recess Mount


Using a pencil and a level draw the perimeter of the backside of the cabinet in desired wall location.

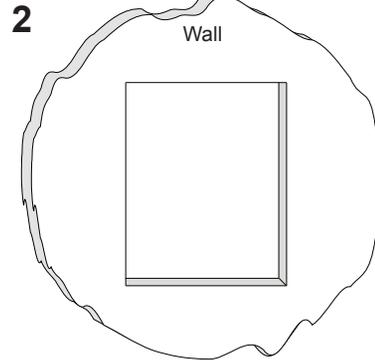


Cut a hole along the drawn perimeter using appropriate tools.

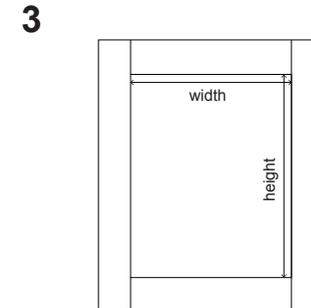


Create a frame using frame studs and frame blocks that would fit the width and height of the backside of your medicine cabinet.

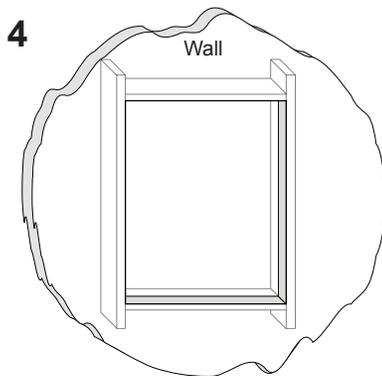


Carefully complete the frame with studs and frame blocks inside the cutout, making sure that edges align.

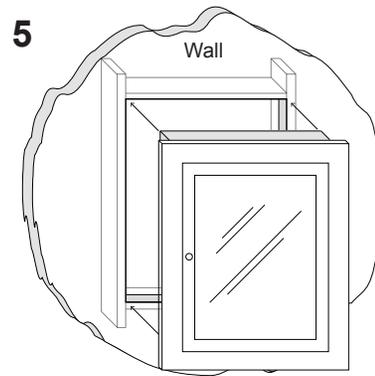


Place an appropriate amount of wood glue on the inner sides of the frame. Position the cabinet into the cutout and into the frame.

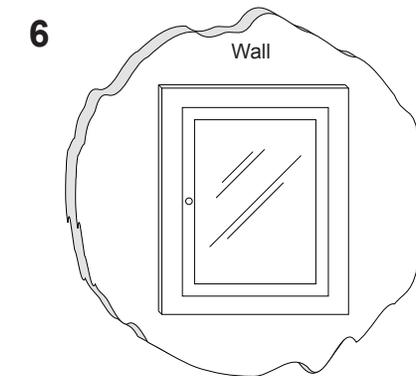

The finished installation should have the medicine cabinet front concealing the edges of your wall cutout.

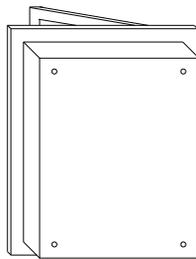Medicine Cabinet Installation: Surface Mount**1**

Have the door of your medicine cabinet open. Carefully drill four holes near the four corners of your medicine cabinet

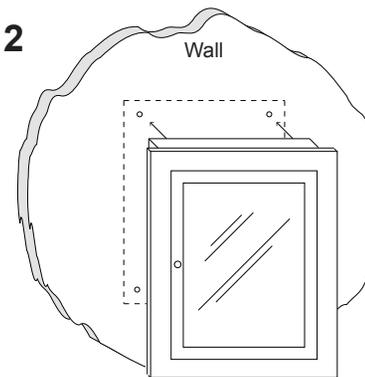2

With a level, position your medicine cabinet to your desired wall location. Align and drill holes into the wall that matches the drilled holes of your medicine cabinet. Secure your medicine cabinet using four Hollow Wall Anchors.